AST (AUTO START TOYOTA)

Toyota / Lexus / Subaru emergency engine start unit

AST unit is designed for emergency engine start on Toyota and Lexus passenger vehicles in case of key

authorization unit malfunction or keys loss. AST unit is used as temporary element for emergency vehicle transportation and not intended to use permanently.

AST unit is used as substitution for key authorization unit (Smart-module or Certification unit).

As you connect the AST device, central lock become unblocked and keyless start system would be activated. When there is no need to use AST, you may return initial state of all electronic units of the vehicle. So AST unit

leaves no traces of usage.



Supported vehicles:

Toyota: Land Cruiser 200, Land Cruiser Prado - (2014 MY)

Camry, Venza, RAV4 (till 2012 MY)


Lexus: LX 570, LS 460, GX 460, RX – (2014 MY)

Subaru: Impreza, Forester, Legacy, Outback – (2014 MY)


Operation sequence (step-by-step instruction)


- 1. Unplug keys authorization unit connectors (see illustrations in Appendix A).
- 2. Plug AST unit to one of those connectors longer one (see Appendix B) and wait for green LED light (approx. three seconds). In the LC200, LX570 models and others connection to the plug of "wheel blocking" is possible.
- **3.** Turn on engine by "Start" button. If the engine did not start at first button push, put key-fob on "Start" button and push it again.
- **4.** Unplug the ASD device. To re-start again connect the AST device.
- **5.** "Reset" of the device it is necessary to press the button.
- **6.** TK-Prog device is necessary for programming of keys.

Appendix A: Key authorization units location

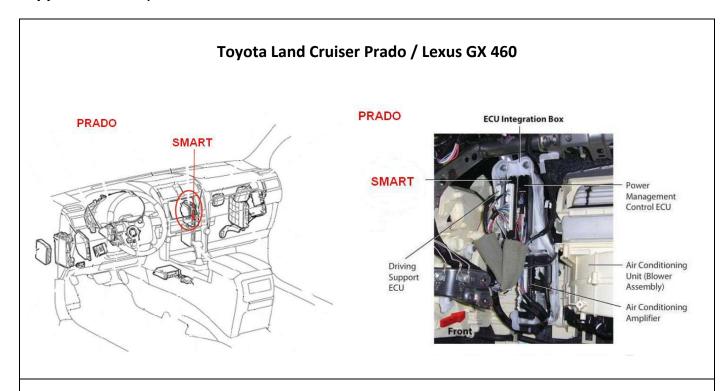


Toyota RAV4 / Lexus RX 350

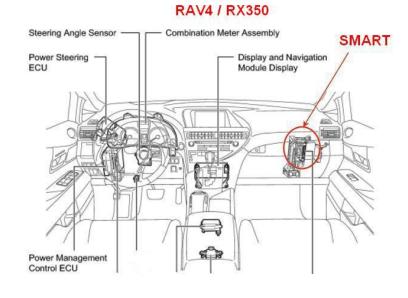

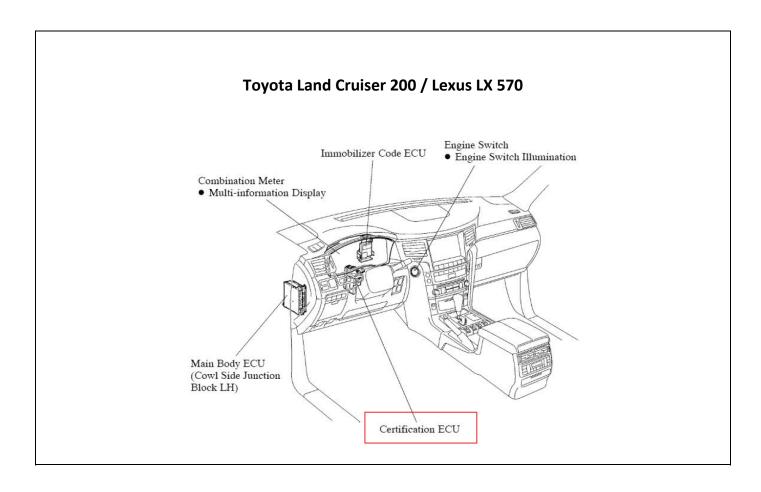


Appendix B: AST unit plug in illustration



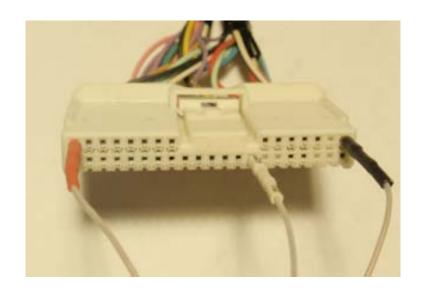

Toyota Land Cruiser200, RAV4, Lexus LX570, LS460, GS, IS - (2014 MY) Camry, Venza (till 2012 MY).



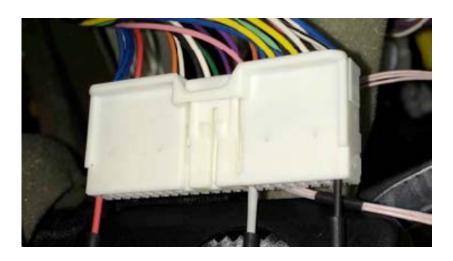

www.mehaco.com